



### SR-100 SNAP RING TOOL

SA-1-001SR	HOUSING*
SA-2-F	HOUSING W/#35,36,37

#### PARTS LIST

DRWG. NO.	DESCRIPTION	PART NO.
3	PISTON SHAFT	3-001
5	PISTON LOCK PLATE	5-01
6	SAFETY LEVER ASSEMBLY	DA-1
7	SPOOL	7-01
8	SPOOL O'RING (2 required)	8-01-K10***
9	SPOOL SPRING	9-01
11	SNAP RING	11-01
14	END CAP	14-001SR
15A	O-RING PISTON SEAL	15A-01***
16	O-RING (2 required)	16-01***
17	O-RING	17-01***
19	RETURN SPRING	19-SR
22	VALVE SPACER	22-01
23	LEVER SCREW (2 required)	28-01-K10
24	VALVE SPACER	24-01
25	CAM	25-C-800
29	PISTON WASHER	9-01
30	ADJUSTING SCREW	30-01-K10
31	LOCK SCREW	31-01-K10
32	CAP SCREW	32-01-K10
33	SCREW (2 required)	28-01-K10
35	JAW HOUSING	2F
36	PIVOT SCREW	23-F
37	INSERT NUT	33-F
38	DOWEL	3-20-K2
39	ROLLER	3-19-453-K2
40	SPRING	40-SR
41	MOUNTING SCREW	41-SR
42	ADJUSTMENT SET SCREW	42-SR
43	TOP JAW	RSR-100-1
44	BOTTOM JAW	RSR-100-2
45	STRAIGHT TIPS	SR-1
46	45° TIPS (Optional)	SR-1-45
47	90° TIPS (Optional)	SR-1-90

\* Sold with trigger and air valve assembly

\*\*\* Only sold as part of O-ring repair kit - #01-SR-KIT

102-5	5 FT HOSE 1/8"X1/4" FITTING	102-5
-------	-----------------------------	-------